

IMPORTANT

Check regularly that the head is clean. Clean with water after use.
Never attach the head if your brushcutter doesn't have a locating flange (see illustration). Never insert metallic objects: it can damage the guide system.
Caution: The number of cutting lines depends of the power of your brushcutter (2, 3, 4 or 6 lines). Listen to the motor of your brushcutter to decide on the number of cutting lines. Use fewer if the motor sounds laboured.

SAFETY WARNING!

- Always wear approved eye protection, helmet and other protective devices to protect yourself when using this trimmer head
- Never operate unit without a debris guard in place
- Keep bystanders at least 15 metres away at all times
- Keep all rotating parts of unit away from your body
- Start work only after checking that there are no objects such as stones, cans or wire around the work site that may be thrown by the cutting head
- Never attempt any maintenance on the trimmer head without first stopping the machine completely

Warranty

We guarantee the assembly and the compatibility of the **UniClik** trimmer head (we will refund the purchase cost if the head cannot be adapted to your trimmer).
The warranty for the trimmer head itself is for a period of 1 year of normal use

Please Note: Eurolux Australia is not liable for incorrect assembly or misuse which causes damage or injury. Loading too many lines may cause damage



EUROLUX AUSTRALIA PTY LTD

PO Box 1335, Mona Vale NSW 1660
Ph 1300137881

Email trimmerhead@eurolux.com.au

Web www.trimmerhead.com.au

ABN 11 091 763 932


Subject to terms & conditions of trade.

Dealer

Date of purchase

**Technical
Assistance
1300 137 881**



UniClik Initial Assembly Instructions

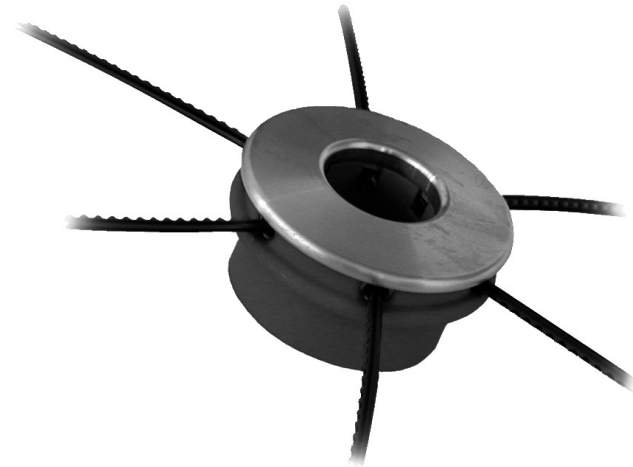

Straight & Bentshaft Machines



Straight Shaft Machines

1. Remove original head.

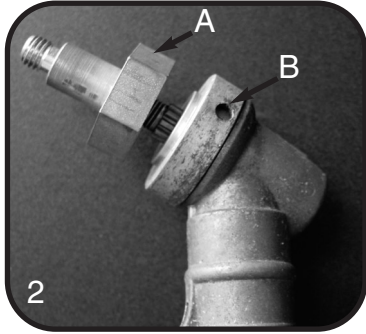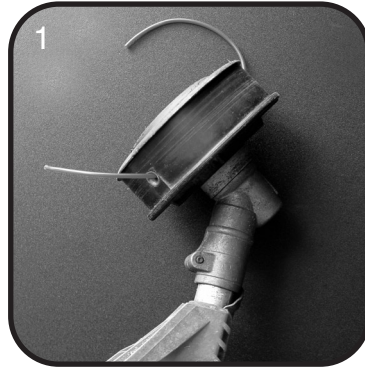

2. Remove hexagonal (or square) bolt (A) if necessary. Most of these are left hand thread. To stop shaft from turning, lock with a bolt in the hole (B).

3. UniClik is centred by locating the recess on the UniClik over the flange on your trimmer. (Assembly is similar to steel blade attachment. When correctly located UniClik will not touch the central bolt)

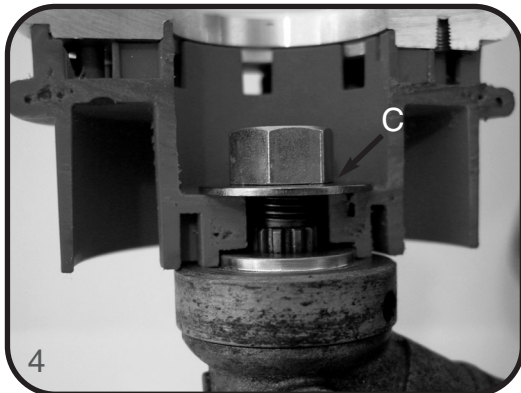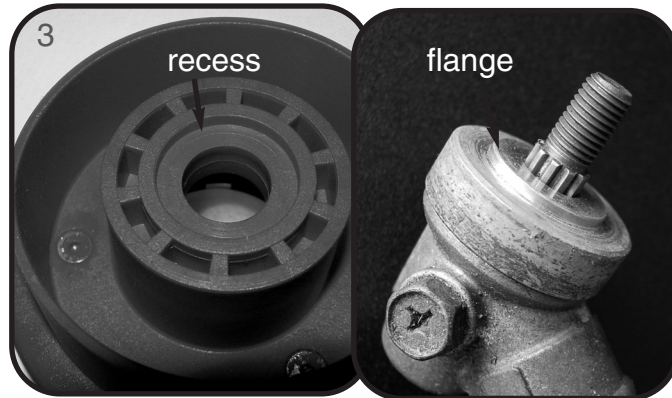

4. Use nut and washer (C) to tighten. Check tightness after first use. Use of a washer is essential - minimum diameter 25mm/1 inch

Please call 1300 137 881 if the flange is too small as a spacer may be required.



Assembly for Bent Shaft Machines

Remove the entire original head.

Note: Some older Ryobi heads have a retaining clip. To remove the housing please split retaining clip first. A chisel or small flat head screwdriver and hammer are best to split the clip. Replacement clips are available from us.




OPTION 1

Your machine has a location flange. Please refer to Straight Shaft assembly.

Note: Most bent shaft machines have right hand thread.

OPTION 2


Your machine has a hex shaft. Please follow instructions below.

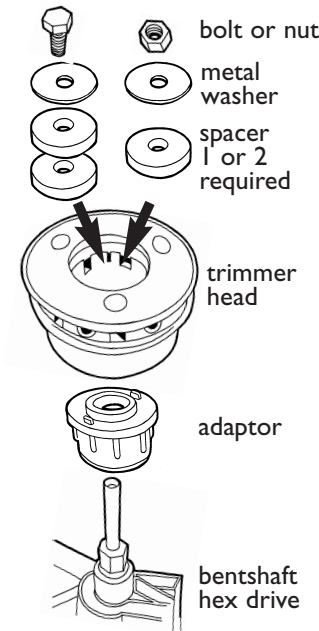

OPTION 3

Your machine has no location flange.

Please call/email us with details of your machine. We will provide you with the correct flange and nut/bolt to suit your model.

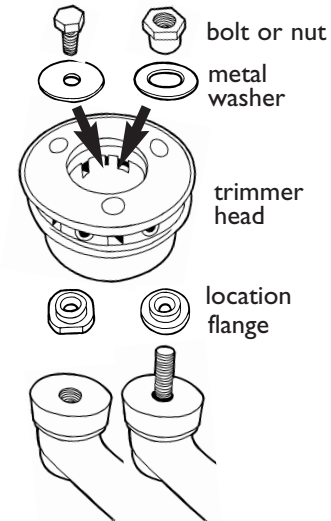

Universal Adaptor Set

Black & Decker, Homelite, McCulloch, Stihl, Ryobi & most other brands

Assemble as shown. You may need different bolts or washers. These are available in your local hardware store or from us.

Phone 1300 137 881. Please have details of your machine handy.

IMPORTANT

- Tighten assembly firmly
- You MUST use the metal washer